

User Commands

Set/Unset System User code

Part Set User code + OMIT2 + ENTER

Test Bells BELL TEST + ENTER + User code

Walk Test WALK TEST + ENTER User code
User code to end test

Change User code 6 + ENTER
current user code
new user code + ENTER (2 Beeps)